

# Sunpak 72-in-1 Card Reader Instructions

## System Requirements

1. USB port
2. Windows 2000, XP, Vista, 7 and later
3. Mac OS X v10.2 and later

## Specifications

USB 2.0 high speed interface with up to 480Mbps and compatible with USB 1.1 standard interface.

## Card Reader Use (not including SIM)

1. Plug the built-in USB cable into a free USB port on your computer (do not use USB ports on your key board or peripherals). When the card reader is properly connected to the USB port, the red status light will illuminate indicating proper connection.
2. Install a CF, SD, SDHC, MMC, Mini SD, M2, MS, MS Pro Duo, xD, SIM or Micro SD memory card in the matching card slot. Once a card is installed, the blue status light will illuminate. For a complete list of readable memory cards, please go to [sunpak.com](http://sunpak.com).
3. Do not remove the memory card or unplug the USB cord when data is being transferred. The blue status light will blink while data is being transferred to and from the card. Once the light is steady, then data transfer has been completed and you may remove your card.
4. Multiple cards may be plugged in at one time, allowing you to transfer data between different cards.

## SIM Card Reader Use

Download the free SIM editing software at <http://www.sunpak.com/sim.html> along with complete instructions on installation, use and operation.